



PARTS BREAKDOWN POWEREASE RV740D ENGINE

MODEL:85.578.220



BEPOWEREQUIPMENT


.COM



PARTS BREAKDOWN POWEREASE RV740D ENGINE


MODEL:85.578.220

CRANKCASE

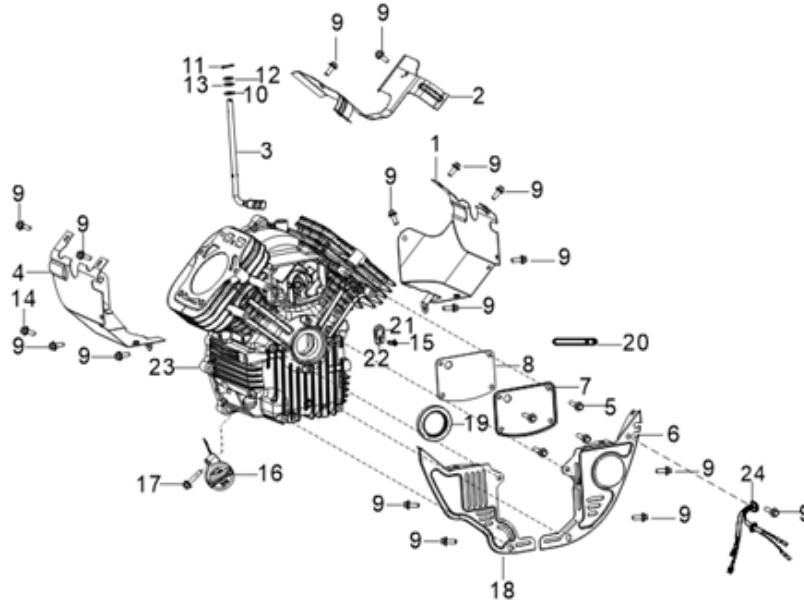

REF #	DESCRIPTION	QTY	BE PART #
16	DIPSTICK ASSEMBLY	1	85.572.200
17	BOLT	1	

CRANKCASE COVER

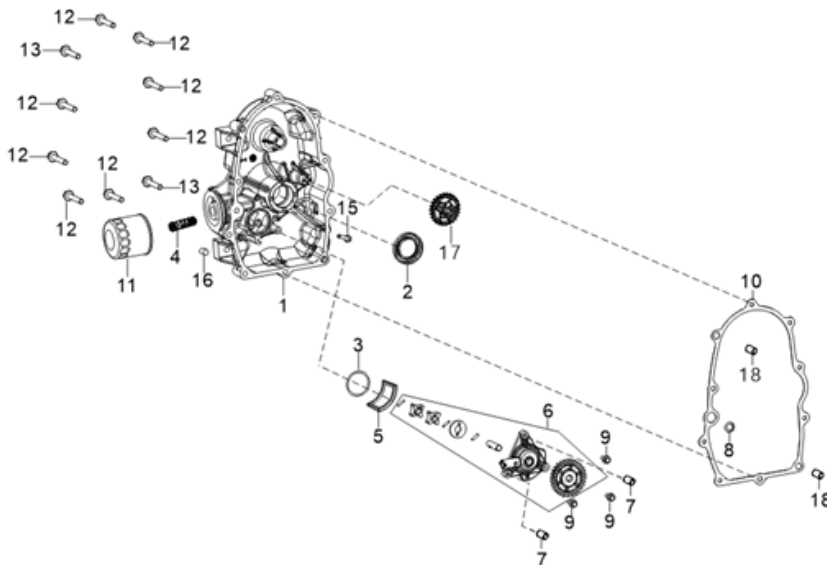


REF #	DESCRIPTION	QTY	BE PART #
11	OIL FILTER	1	85.572.201



PARTS BREAKDOWN POWEREASE RV740D ENGINE


MODEL:85.578.220

CYLINDER HEAD ASSEMBLY

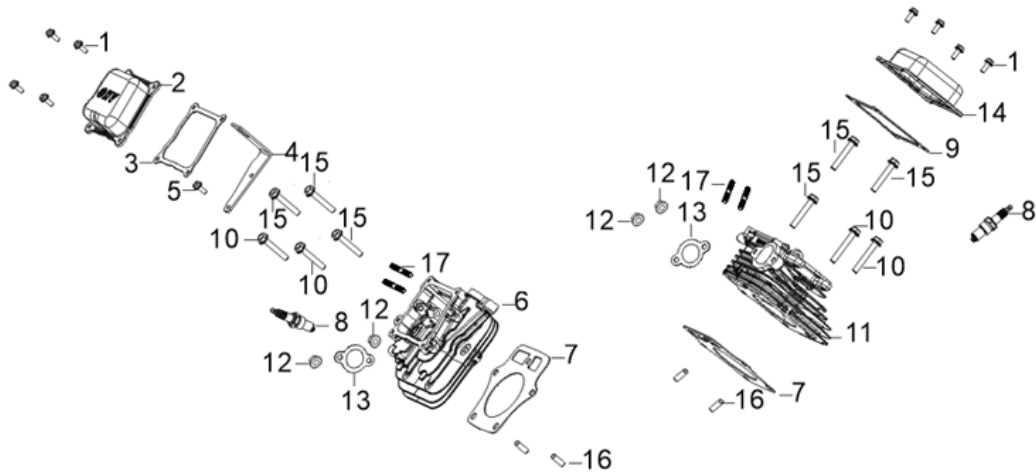

REF #	DESCRIPTION	QTY	BE PART #
3	CYLINDER HEAD COVER GASKET	1	85.572.202
4	LUG	1	
7	GASKET, CYLINDER HEAD	2	85.572.204
13	GASKTER, EXHAUST OUTLET	2	
8	SPARK PLUG	1	85.572.203

ENGINE SHROUD

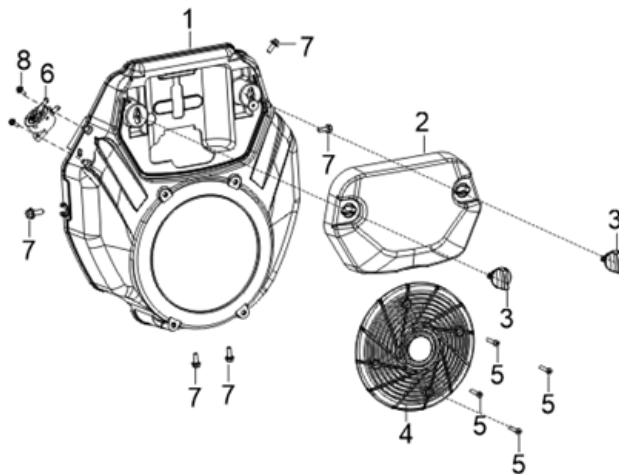


REF #	DESCRIPTION	QTY	BE PART #
6	FUEL PUMP	1	85.572.205
8	SELF-TAPPING SCREW	2	



PARTS BREAKDOWN POWEREASE RV740D ENGINE


MODEL:85.578.220

CARBURETOR AND FILTERS

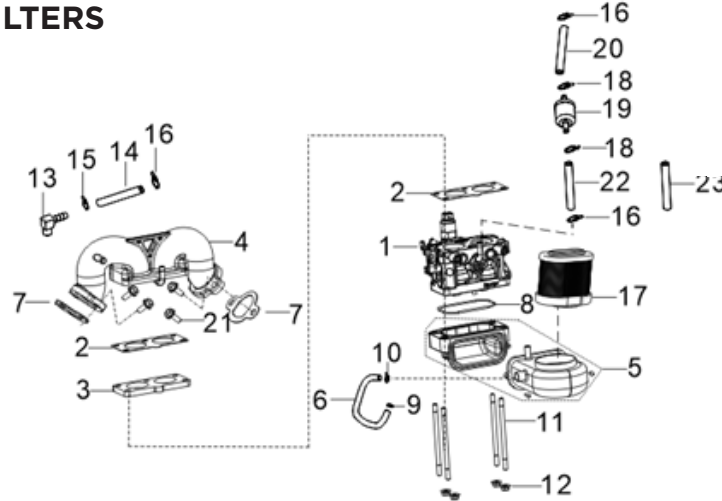

REF #	DESCRIPTION	QTY	BE PART #
1	CARBURETOR ASSEMBLY	1	85.572.206
2	GASKET, CARBURETOR SEAL	2	
3	GASKET, CARBURETOR INSULATOR	1	
7	GASKET, INLET	2	
8	O-TYPE RUBBER SEAL RING	1	
17	AIR FILTER ELEMENT	1	85.572.207
19	FUEL STRAINER	1	85.572.208

FLYWHEEL

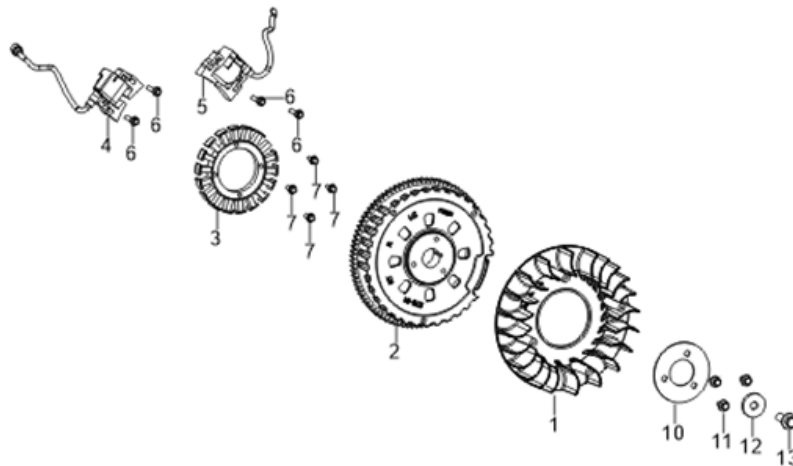


REF #	DESCRIPTION	QTY	BE PART #
4	COIL, IGNITION	1	85.572.209
5	COIL, IGNITION	1	



PARTS BREAKDOWN POWEREASE RV740D ENGINE

MODEL:85.578.220

WIRING DIAGRAM

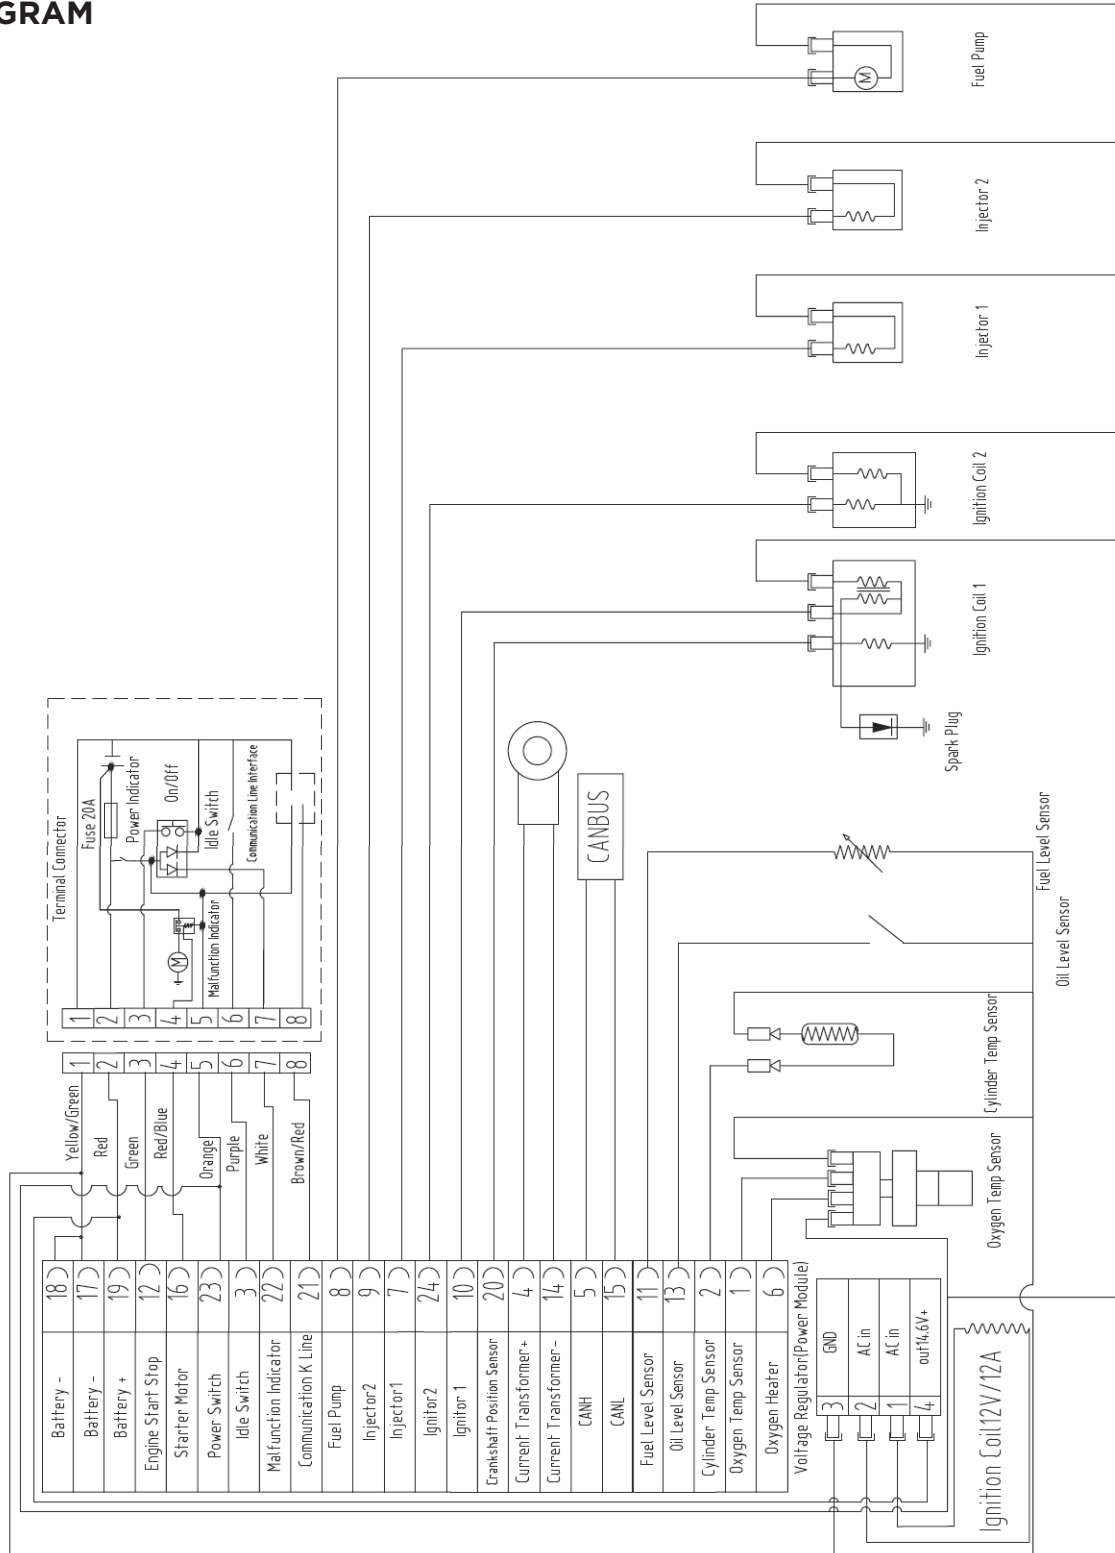




PARTS BREAKDOWN POWEREASE RV740D ENGINE


MODEL:85.578.220

WIRING CONNECTIONS

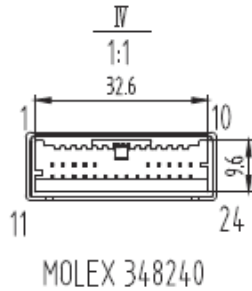

ECU Pin definition

Battery -	18
Battery -	17
Battery +	19
Engine Start Stop	12
Starter Motor	16
Key Switch	23
Idle Switch	3
Malfunction Indicator	22
Communication K Line	21
Fuel Pump	8
Fuel Injector 2	9
Fuel Injector 1	7
Ignitor 2	24
Ignitor 1	10
Crankshaft Position Sensor	20
Current Transformer+	4
Current Transformer-	14
CANH	5
CANL	15
Fuel Level Sensor	11
Oil Level Sensor	13
Cylinder Temperature Sensor	2
Oxygen Temperature Sensor	1
Oxygen Heater	6

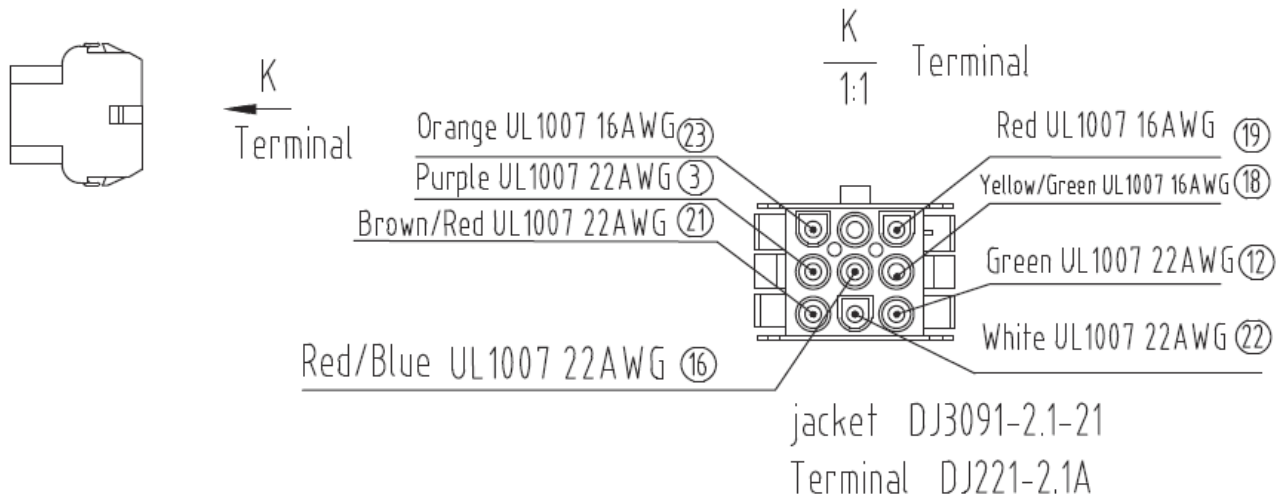

BE

POWER EQUIPMENT

If you need technical assistance call:

1-866-850-6662

(8:00am - 4:30pm PST, Mon - Fri)